

Single Monitored Input Unit – BN-303

Interactive fire detection systems
Product datasheet

Features

- Interactive
- For interfacing switches and 3rd party detectors with relay outputs to Autronica's interactive fire detection systems
- Multi function unit: Function selected by switch setting
- 1 non-isolated input: on/off function with end-of-line monitoring
- With SelfVerify function for reduced maintenance/testing and increased reliability on input for critical alarm functions
- Short-circuit isolator of detection loop in each unit
- Automatic addressing
- Proven technology
- Wall mounted
- Designed to meet the requirement of the major maritime classification societies
- Approved according to EN 54-17 and EN 54-18

Description

The Single Monitored Input Unit BN-303 has been designed for use with Autronica's fire detection systems, Autroprime (version 1.1.0 or newer) and AutoSafe (version 4.3.1 or newer), and includes the SelfVerify function. This function ensures the highest grade of reliability and reduces the need for manual testing because the panel is able to continuously and automatically check all units that include this function.

Note: External devices attached to this interface unit require a separate power source (they can not be powered by the detection loop).

SelfVerify: The unit's ability to initiate alarm is regularly checked.



Function Options / Switch Settings

The internal DIP switch S1 selects the function performed by the BN-303. For location of the DIP switch, refer to circuit board drawing on the next page. Refer to detailed descriptions of each function on this datasheet (Descriptions of function options A-E).

The available functions include:

- **Function A**
Alarm condition signalling input
- **Function B**
Pre Alarm condition signalling input unit
- **Function C**
Fault condition signalling input
- **Function D**
Uncommitted input unit
- **Function E**
Pre Alarm and Alarm condition signalling input unit with configurable input delay
- **Function F**
Fault, Pre Alarm and Alarm condition signalling input

Technical specifications	
Dimensions (mm)	112 x 110 x 50
Weight (g)	192
Housing material	Polyamide
Colour	Light grey
Mounting	Wall mounting, 100mm bolt space
Power	Unit connects to AL_Com only
Voltage	Supplied from detection loop
Peak current consumption (during communication)	359 μ A
Average current consumption	<60 μ A
Temperature range	-25 to +70°C
Humidity	10% - 95% RH (non-condensing)
Degree of protection	IP54
Membrane glands: PG glands (PG-13,5):	IP67
Approvals	See Autronica's website
Communication loop	Autronica Loop Communication protocol (AL_Com)
Cable terminals	Max 2.5mm ² single core wires
Cable requirements AL_Com	Refer to specification for Autroprime or AutoSafe
Maximum input cable length	10m, non-shielded or shielded. End termination 2kohms +/-5%
Maximum cable capacitance	10nF
Response time	<= 1 second
Threshold	Short-circuit: 0-235 Ω Activate: 260-1000 Ω Normal: 1200-4800 Ω Open circuit: 5400- ∞ Ω

 0333
Autronica Fire and Security AS, N-7483 Trondheim 08 0333-CPD-075249
EN 54-17:2005 Short circuit isolators EN 54-18:2005 Input/output devices


Part number	Description
116-BN-303	Single monitored input unit
116-6571-011.6020	Membrane gland TSS M20, grey
Optional:	
116-6571-011.1920	Gland IP67
116-6531-006.1920	Backnut for gland

Connectors


All connections are made to the screw terminals numbered 1-6.

Part number	Description
1	AL_Com In (+)
2	AL_Com In (-)
3	AL_Com Out (+)
4	AL_Com Out (-)
5	Input (+)
6	Input (common)

Dimensions

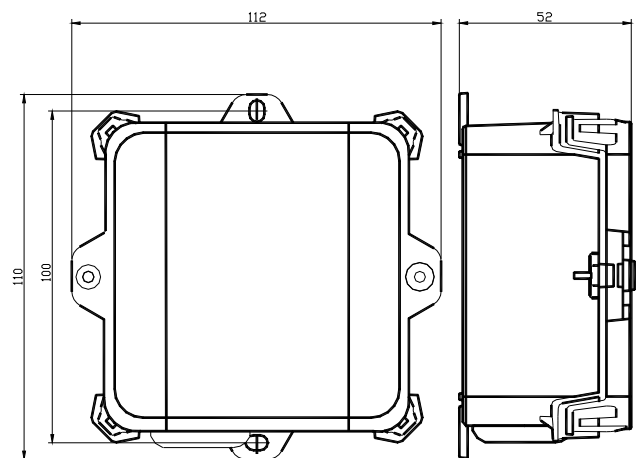

Connectors and DIP switches on circuit board

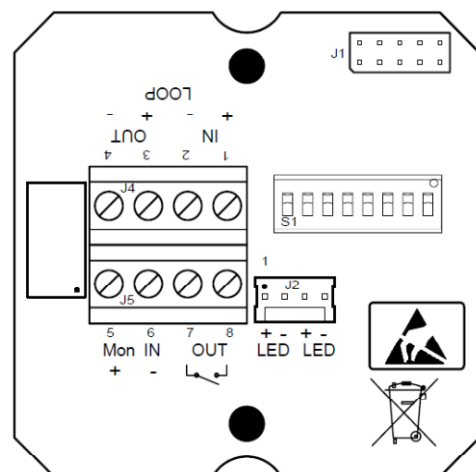


AUTRONICA FIRE AND SECURITY AS

Head office, Trondheim, Norway Tel: +47 73 58 25 00, fax: +47 73 58 25 01, e-mail: info@autronicafire.no
 Oil and Gas division, Stavanger, Norway Tel: +47 51 84 09 00, fax: +47 51 84 09 99
 Maritime division, Spikkestad, Norway Tel: +47 31 29 55 00, fax: +47 31 29 55 01


Visit Autronica Fire and Security AS' website: www.autronicafire.com

Descriptions of connection options


Input configuration A

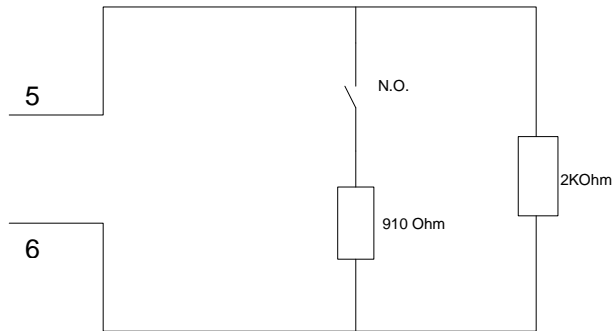

Input configuration B

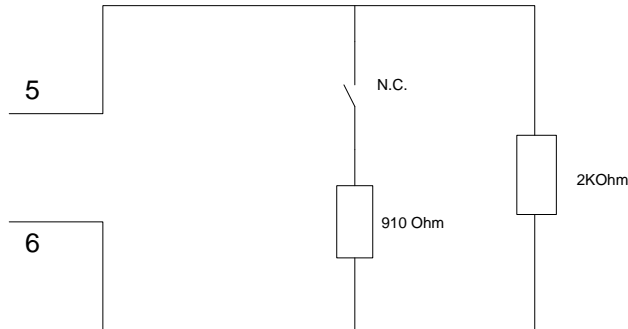

Input configuration C

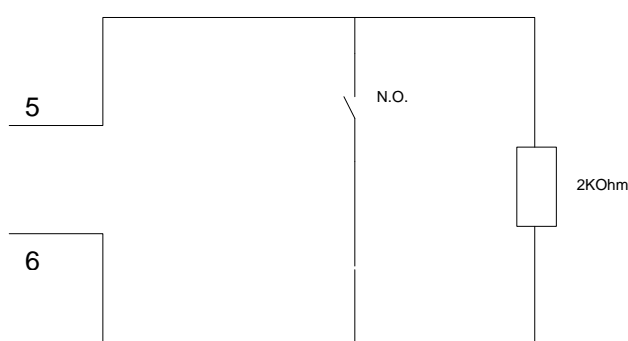

Input configuration D


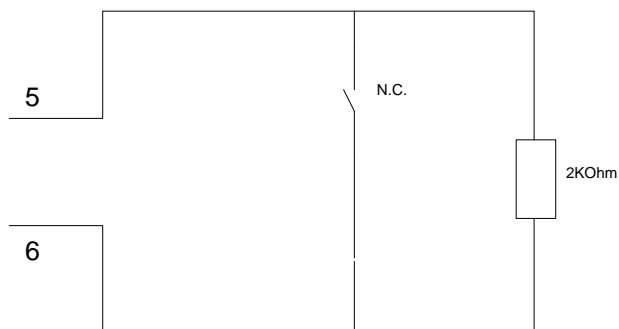


Figure 1

The electrical connection options for the input to the unit are shown in Figure 1. The various electrical input configurations allow a user to select under what condition the unit will be 'triggered' to provide a signal the fire alarm system indicating the selected condition.

The four different behaviours can be configured by DIP switch 5 and 6 in order to be able to monitor different setups of the input contact (s). (Switch 7 and 8 are not used).

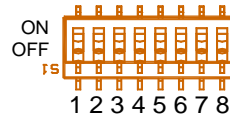

(See location of DIP switch S1 on the circuit board drawing)

Input configuration A activates when the contacts are closed. This arrangement also allows the unit to monitor for an electrical wiring fault in the form of an open or short-circuit, between the contacts and the unit, either before or during activation.

S1.5	S1.6
OFF	OFF

Normal Open contact with 'activate' resistor, fault monitored for open and short-circuit.

Input configuration B activates when the contacts are opened. This arrangement allows the unit to monitor for an electrical wiring fault in the form of an open or short-circuit, between the contacts and the unit, either before or during activation.

S1.5	S1.6
OFF	ON

Normal Closed contact with 'activate' resistor, fault monitored for open and short-circuit.

Input configuration C activates when the contacts are closed. This arrangement allows the unit to monitor for an open circuit fault in the electrical wiring before activation. A short-circuit in the wiring will trigger the unit.

S1.5	S1.6
ON	OFF

Normal Open contact without 'activate' resistor, fault monitored for open circuit.

Input configuration D activates when the contacts are opened. This arrangement allows the unit to monitor for an open circuit fault in the electrical wiring during activation.


S1.5	S1.6
ON	ON

Normal Closed contact without 'activate' resistor, fault monitored for open circuit.

AUTRONICA FIRE AND SECURITY AS

Head office, Trondheim, Norway Tel: +47 73 58 25 00, fax: +47 73 58 25 01, e-mail: info@autronicafire.no
 Oil and Gas division, Stavanger, Norway Tel: +47 51 84 09 00, fax: +47 51 84 09 99
 Maritime division, Spikkestad, Norway Tel: +47 31 29 55 00, fax: +47 31 29 55 01

Descriptions of function options

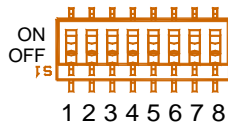

(See location of DIP switch S1 on the circuit board drawing)

Function A

S1.1	S1.2	S1.3	S1.4
OFF	OFF	OFF	OFF

Function: Alarm condition signaling input.

Number of addresses: 1

Application include:

- Fire alarm push buttons
- Flame, heat or beam detectors with relay contacts

Function B

S1.1	S1.2	S1.3	S1.4
ON	OFF	OFF	OFF

Function: Pre Alarm condition signaling input.

Number of addresses: 1

Application include:

- Manual input for Pre Alarm
- Pre Alarm input from a detector with relay output

Function C

S1.1	S1.2	S1.3	S1.4
OFF	ON	OFF	OFF

Function: Fault condition signalling input.

Number of addresses: 1

Application include:

- Monitoring of associated equipment for faults
- Monitoring of detectors with relay contacts

Function D

S1.1	S1.2	S1.3	S1.4
ON	ON	OFF	OFF

Function: Uncommitted input.

Number of addresses: 1

Applications:

A typical application is monitoring of the power fault contact in the power supply or a fire pump. This unit can be used for:

- Monitoring of water level detection systems
- Monitoring of smoke control damper systems
- Monitoring of extinguishing systems
- General Alarm Push Button (GAPB)

Function E

S1.1	S1.2	S1.3	S1.4
OFF	OFF	ON	OFF

Function: Delayed Alarm condition. Configurable delays for entering Pre Alarm and Alarm condition.

The default timer value is:

10 seconds before entering Pre Alarm condition.

20 seconds before entering Alarm condition.

Number of addresses: 1

Application include:

- Sprinkler contacts, etc.

AUTRONICA FIRE AND SECURITY AS

Head office, Trondheim, Norway Tel: +47 73 58 25 00, fax: +47 73 58 25 01, e-mail: info@autronicafire.no
 Oil and Gas division, Stavanger, Norway Tel: +47 51 84 09 00, fax: +47 51 84 09 99
 Maritime division, Spikkestad, Norway Tel: +47 31 29 55 00, fax: +47 31 29 55 01

Visit Autronica Fire and Security AS' website: www.autronicafire.com

Function F


S1.1	S1.2	S1.3	S1.4
ON	OFF	ON	OFF

Function: Fault, Pre Alarm and Alarm condition.

Number of addresses: 1

Applications include:

- Fire detectors with two-level output (Pre Alarm and Alarm).

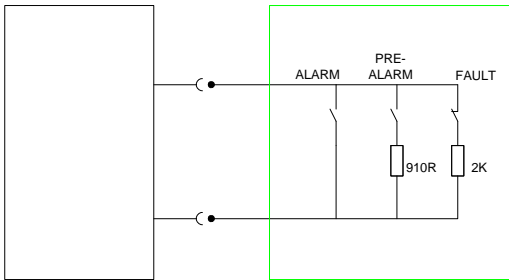

AUTRONICA FIRE AND SECURITY AS

Head office, Trondheim, Norway Tel: +47 73 58 25 00, fax: +47 73 58 25 01, e-mail: info@autronicafire.no
 Oil and Gas division, Stavanger, Norway Tel: +47 51 84 09 00, fax: +47 51 84 09 99
 Maritime division, Spikkestad, Norway Tel: +47 31 29 55 00, fax: +47 31 29 55 01

Visit Autronica Fire and Security AS' website: www.autronicafire.com